

Oven

BO 210/211

Table of Contents

Safety Notes	4	Timer	19
Before Use	4	Calling up the Timer Menu	19
Intended Use	4	Timer	19
Safety while Baking	4	Stopwatch	20
Damage to the Appliance	4	Cooking Time Duration	21
		Cooking Time End	22
Operating for the First Time	5		
Avoiding Damage to the Appliance and the Cabinet	5	Child Lock	23
Oven	5	Activating the Child Lock	23
Cabinet Fronts near the Oven	5	Deactivating the Child Lock	23
		Note	23
Features of your New Oven	6	Safety Deactivation	24
Oven	6		
Display and Controls	7	Changing the Basic Settings	25
Keys	7	Note	25
Accessories	8		
Heating Modes	9	The Following Settings Can Be Changed	26
First Settings after Installation	10		
Note	10	Care and Manual Cleaning	27
Setting the Clock	10	Safety Notes	27
Choosing the Time Format	10	Cleaning the Oven Interior	27
Temperature Unit °C or °F	10	Cleaning the Glass Front	27
Exiting Menu and Saving Settings	10	Cleaning the Door Seal	27
		Cleaning the Accessories	27
Activating the Oven	11	Cleaning the Baking Stone	27
Standby	11		
Activating the Oven	11	Catalytic Cleaning	28
		Before Starting Catalytic Cleaning	28
Setting the Oven	12	Setting the Program	28
Setting the Temperature and Cooking Mode	12	Note	29
Current Oven Temperature Display	12		
Baking Table	13	Removing the Rails	29
Roasting Table	14	To Unhook the Rails	29
		To Hook Rails Back into Position	29
Grilling Table	16		
Tips and Tricks	17	Trouble Shooting	30
Baking	17	Error Messages	30
Further Tips for Baking	18	Exhibition Mode	30
Tips for Roasting and Grilling	18	Power Cut	31
		Replacing the Oven Light	31



Safety Notes

Before Use

The appliance is only guaranteed safe to use if installed by a specialist in accordance with the installation instructions. The installer is liable for any damage resulting from incorrect installation.

The appliance may only be connected by a licensed specialist. The local electricity supplier's regulations and construction regulations apply.

Read the instruction manual carefully before operating the appliance. Only then will you be able to operate your appliance safely and correctly. Keep the instruction and installation manual for future reference.

Do not connect the appliance if it has been damaged.

Intended Use

This appliance is intended only for domestic use. Only use the appliance to prepare meals. Do not use the appliance to heat up the room in which it is installed.

Never allow children to play with the appliance.

Do not let adults or children operate the appliance unsupervised:

- if they are mentally or physically unable to use the appliance safely and correctly
- if they don't have the knowledge and experience to use the appliance safely and correctly.

Safety while Baking

Warning, risk of burns! Do not touch hot heating elements or interior surfaces of oven. Keep children away.

Warning, risk of fire! Do not store flammable products in the oven. Only leave the parts needed inside the oven during use.

Warning, if preparing food with alcoholic beverages (for example rum, cognac, wine, etc.). Remember that alcohol evaporates at high temperatures. It is possible that vapours released by the alcohol can catch fire.

Warning, risk of fire! Oil and fat can ignite quickly. Remove cooking oil and fat deposits before the next use.

Warning! Hot steam can escape during use. Do not touch the ventilation openings.

Warning! Hot steam can escape when opening the oven door.

Warning, risk of burns! The inside of the door gets very hot during operation; observe appropriate caution when opening the appliance. The open door can swing back.

Do not trap connecting cables of electrical appliances in the hot oven door. The cable insulation can melt. Risk of short-circuiting!

Damage to the Appliance

If the appliance is damaged, switch off the corresponding household fuse. Call after-sales service.

Incorrect repairs are dangerous. Repairs must be carried out by one of our experienced after-sales engineers.

Operating for the First Time

Remove the packaging from the appliance and dispose of it according to local regulations. Be careful to remove all accessories from the packaging. Keep packaging elements and plastic bags away from children.

Check the appliance for transport damage after unpacking it. Do not connect the appliance if it has been damaged.

The appliance must be connected by an authorised specialist. No warranty claims can be lodged for any damage resulting from incorrect connection. Observe the installation instructions.

Heat the empty oven for an hour at 240 °C before using it for the first time. This will eliminate any 'newness' smells.



This appliance is labelled in accordance with the European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable.

Avoiding Damage to the Appliance and the Cabinet

Oven

Remove fruit acids such as the juice of lemons or plums etc. after every baking operation. The acid can cause spots on the oven's enamel.

Never splash water into a hot oven. This could damage the enamel.

Do not place the baking tray directly onto the bottom of the oven. Do not place utensils (for example a roaster) directly onto the bottom of the oven. Do not line the bottom of the oven with aluminium foil. This will cause a build-up of heat which can damage the enamel.

Do not cover the ventilation openings of the oven.

Do not take off the door seal. A damaged door seal must be changed immediately.


The socket for the separate heating element for the baking stone (special accessory) can be found in the middle of the back panel at the bottom. During normal operation, please leave the cover in the socket.

Cabinet Fronts near the Oven

After taking the food out of the oven, allow the oven to cool down with the door closed. Do not leave the oven door half open, the hot air can cause damage to adjacent cabinets. The cooling fan will continue to run for a while and will then switch off automatically.

Features of your New Oven

Oven

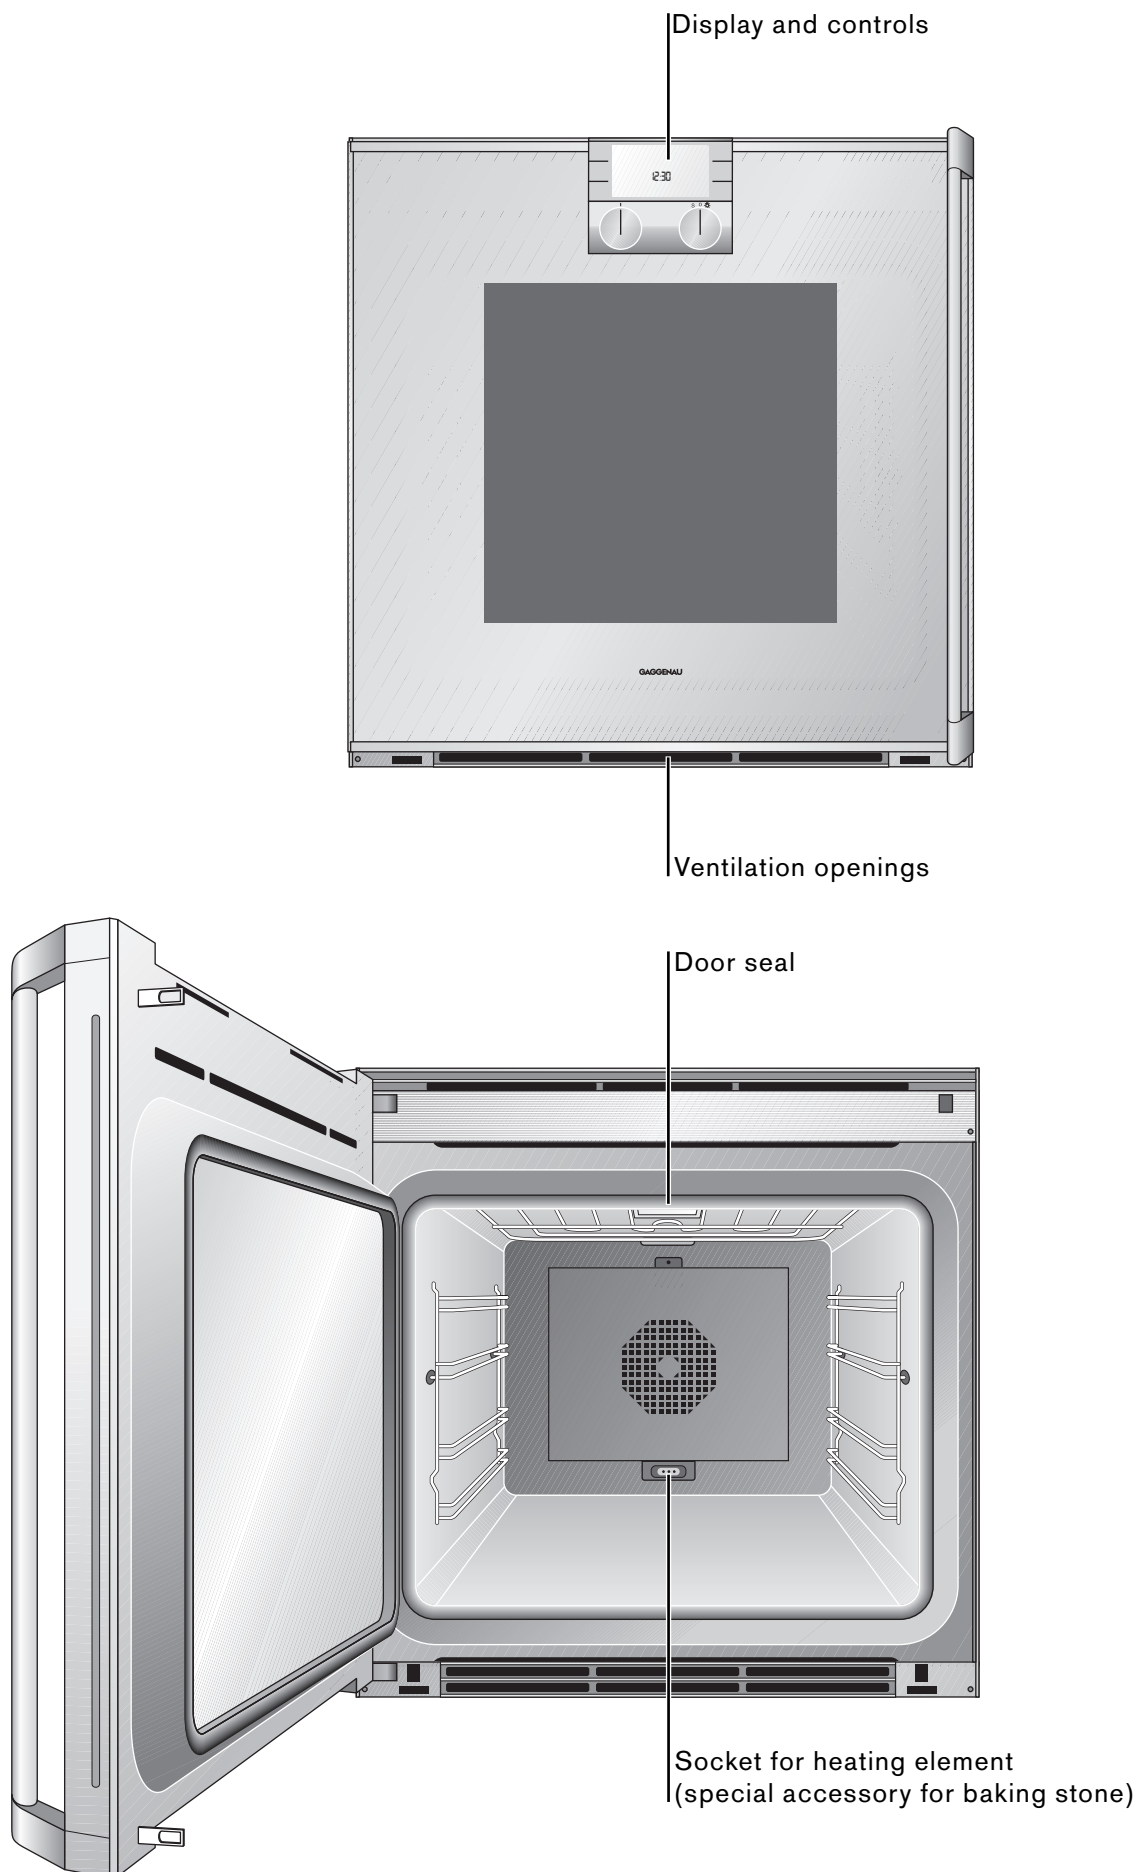

Display and Controls

Display

In the top part of the display is the status bar or a call up menu. The lower part shows the different settings.



Touch keys

The keys on the left and right beside the display are touch sensitive. The function of the keys depends on the chosen setting. The icon beside the key shows the function of the key.

Function selector

Use the left knob to select the cooking mode you will use to prepare your meal or the catalysis function. You can turn the knob to the right or left.




Temperature selector

You can set a temperature between 50 and 300 °C or the catalysis function. You can turn the knob to the right or left. To switch on the light in the oven, turn the temperature selector one position to the right. The light in the oven remains off if the temperature is set below 70 °C.

Keys

Symbol	Function
>	move right
<	move left
↻	save selected values / start
C	cancel
+	increase values
-	decrease values
🕒	timer menu
🔧	basic settings menu
i	call up current oven temperature
🔒	child lock activate
🔓	child lock deactivate
⏸	timer stop
▶	timer start

Accessories

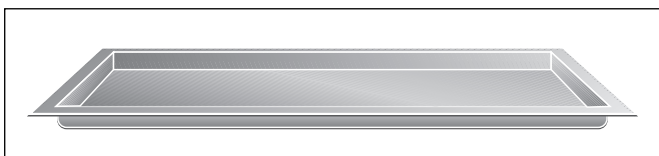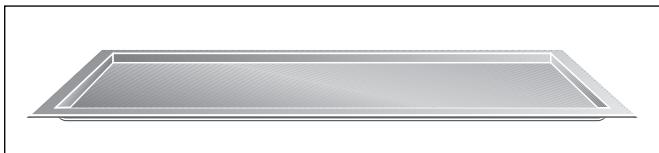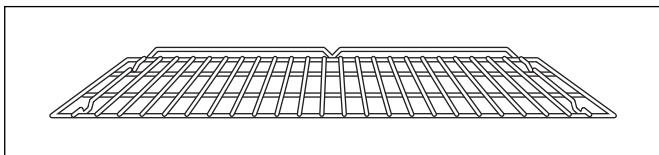



As standard, your appliance comes with the following accessories:

- Wire rack for cake tins, roasts, grilled pieces and crockery

Always insert the wire rack with the double crossbrace to the back.

- Baking tray for cakes, biscuits and pastries

- Grilling tray for roasts or as a grease collecting tray

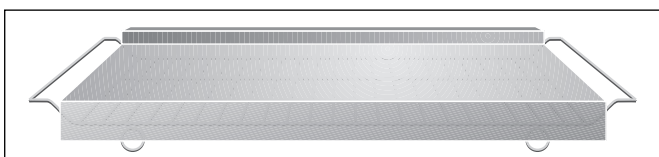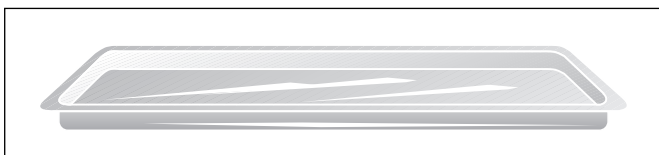

You can order the following special accessories:

- Glass tray for gratins and fruit cake

- Baking stone with wire rack and wooden pizza spatula for pizza and bread







 
 
 

Additionally you will require the heating element.

- Heating element for baking stone

- 4 level telescopic shelf rails

Important note: do not use the baking stone in combination with the telescopic shelf rails

Heating Modes

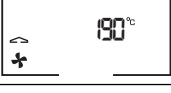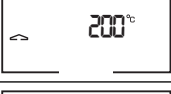Display	Heating mode	Use
	Hot air	For cakes, biscuits and puff pastry on several levels
	Economy (the oven light is off)	Energy saving hot air mode for cakes, small pastries or gratins
	Hot air and bottom heat	Additional heat from beneath for moist cakes, for example fruit cakes
	Bottom heat	Further baking, for example for fruit cakes, for preserving or for food in a bain-marie
	Top and bottom heat	For cakes in tins or on trays, gratins or roasts
	Top heat	Direct heat from the top, for example to brown meringue on a fruit cake
	Grilling with hot air	Evenly distributed heat for meat, poultry or whole fish
	Grilling	Grilling flat pieces of meat, sausages or fish fillets melting cheese, gratins
	Baking stone operation (only with special accessories)	Heated baking stone for crispy pizza, bread or bread rolls like from a solid stone oven
	Catalysis (only with special accessories)	Catalytic cleaning function

First Settings after Installation

When your new oven has been connected, the first settings menu appears on the display. You can set the clock, time format, and the temperature unit.

Note


The first settings menu appears only after the appliance has been connected or if the appliance is without electricity for several days.

Refer to the chapter basic settings if you wish to change these parameters at any time.

Setting the Clock

The clock function appears on the screen.


Using the **+** / **-** keys set the correct time.

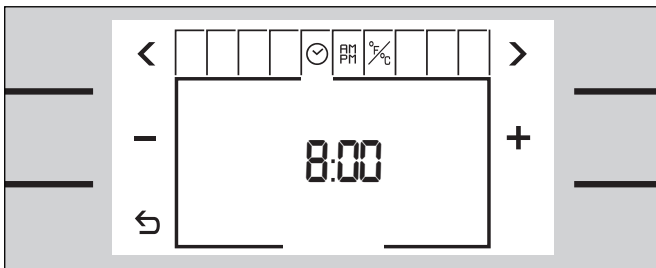

Choosing the Time Format


- 1 Using the menu key **>** select the time format setup menu.
- 2 The time format can be either 12 hour format (AM/PM) or 24 hour format. The 24 hour format is pre-selected.

You can change the time format using the **+** / **-** keys.

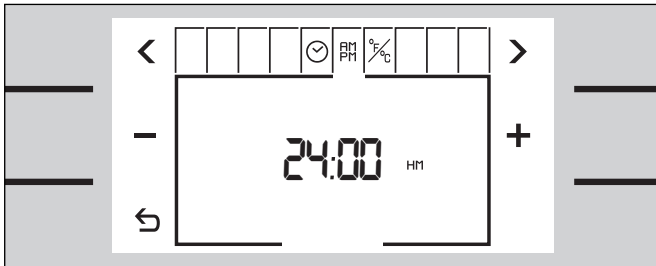

Temperature Unit °C or °F

- 1 Using the menu key **>** select the temperature unit function **%**. °C is pre-selected.
- 2 You can change the temperature unit using the **+** / **-** keys.

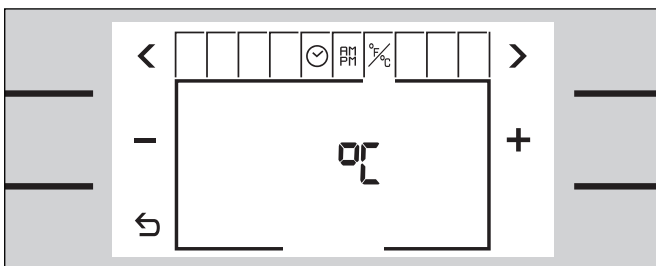

Exiting Menu and Saving Settings

Touch the **S** key to exit the menu. All settings are saved.

The oven is on standby. The standby screen appears.

Activating the Oven

Standby

The oven remains on standby when no operating mode is selected or the child lock is activated.

The keys are not activated. The display is not lit.

Note:

The display contrast depends on the vertical viewing angle.



Activating the Oven

To leave standby do one of the following:

- touch a key
- open or close the oven door
- turn the temperature knob
- turn the function knob

Now you are able to set the required function. Read the relevant chapter on how to activate the required function.

Note:

The standby screen reappears after one minute if no further function is chosen. The display light goes off.

Setting the Oven

The main operations of your oven are easily set using the knobs.

Using the right knob you can set the temperature. To switch on the light in the oven, turn the temperature knob one position to the right.

The temperature range is 50 - 300 °C.


Using the left knob you can set the cooking mode. The top position is hot air.

Setting the Temperature and Cooking Mode

- 1 Set the temperature knob to the required temperature.
Temperature and cooking mode symbol appear on the display. The light in the oven goes on.



To select another cooking mode:

- 2 Turn the function knob until the required cooking mode appears on the screen.


The heating up symbol  appears until the required temperature is reached. The symbol appears again when the oven heats during operation.

The temperature and cooking mode can be changed at any time.

When the meal is ready switch the oven off using the temperature knob. The oven light goes off. The standby screen appears.

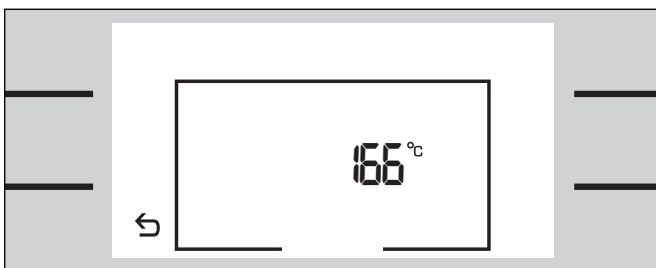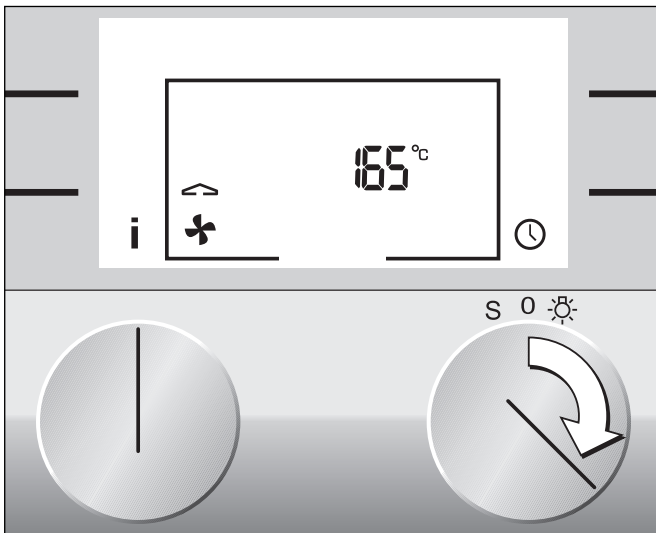

Current Oven Temperature Display

The current oven temperature is briefly shown when you press the **i** info key. Using the  key you can return to the standard screen.

Note:

Depending on the heating mode, a slight temperature variation after heating up during use is normal.

Baking Table

Cakes and biscuits	Level from below	Hot air Temp. °C	Economy Temp. °C	Hot air and bottom heat Temp. °C	Top and bottom heat Temp. °C	Baking time Min.
Swiss roll	2				210	7-9
Flan base	2				165-175	30-35
Fruit flan on yeast dough	2	165			165-175	40-45
Fruit flan on short-crust pastry	2	165	165	165	165-175	40-45
Small flaky pastry cakes	1+3/2*	180	180		190	15-20
Cheesecake (high)	2	165	165	165	165-170	90-100
Cheesecake slices (flat)	2	165	165	165	165-175	45-50
Sponge cake (round)	2	160-170	160-175		170-175	50-60
Loaf cake	2	160-170	160-175		170-175	50-60
Yeast dough ring cake (tall)	1	160-175			165-175	40-50
Biscuits	1+3/2*	160-175	160-175		165-170	15-20
'Hefezopf'	2	165			165-170	30-40
Cake on baking tray (dry top)	2	165-170	165-170		165-170	40-50
Cake on baking tray (moist top)	2	165-170	165-170	170	165-170	40-50
Cream puffs	1+3/2*	180	180		180-190	20-25
Mixed-grain bread**	2	200/170			210/170	40-50

* In the economy and hot air modes you can bake simultaneously on several levels.

** Preheat the appliance to the specified temperature. Switch back to the second temperature when inserting the food.

Note: The values given above should be looked upon as recommended values. We advise you to always preheat the oven.

For baking yeast dough we recommend the hot air circulation mode.

The recommended mode is printed in bold.

Roasting Table

Dish	Level from below	Hot air Temp. °C	Grill and hot air Temp. °C	Top and bottom heat Temp. °C	Cooking time Minutes
Beef					
Roast beef 1,5 kg*	2	180		180	60-90
Roast beef rare 1,5 kg**	2	230/180	230/180		45-50
Roast beef medium 1,5 kg**	2	230/180	230/180		60-70
Roast beef well done 1,5 kg**	2	230/180			90-100
Pork					
Pork roast 1,5 kg**	2	230/180	230/180		60-70
Pork roast with rind 1,5 kg***	2	180/200	180/200		60-70
Smoked pork 1,5 kg**	2	180/160			40-50
Leg of pork***	2	150/200	150/200		50-60
Collared roast**	2	230/180	230/180		60-70
Veal					
Roast veal**	2	230/180		230/180	60-70
Leg of veal***	2	150/180	150/180		50-60
Loin of veal	2	160-170			20
Stuffed breast of veal*	2	120-130			120

* First brown the meat all-round in the casserole on the cooker.

** Brown the meat at a high heat level, switch back to a lower temperature after 15-20 minutes.

*** Cook the meat at a low temperature, set the temperature higher for the last 15-20 minutes.

Note: The values given above should be looked upon as recommended values. We advise you to always preheat the oven.

The recommended mode is printed in bold.

Roasting Table

Dish	Level from below	Hot air Temp. °C	Grill and hot air Temp. °C	Top and bottom heat Temp. °C	Cooking time Minutes
Venison					
Roast boar*	2	170-180			60-90
Leg of venison*	2	170-180			60-80
Saddle of venison	2	165-175		170-180	20-25
Leg of lamb*	2	180-200			35-45
Poultry					
Duck 2-3 kg**	2	160/190		160/190	100-120
Duck breast	2	160		160	15-20
Goose 2-3 kg**	2	160/190		160/190	100-120
Turkey 3-4 kg**	2	160/190		160/190	120-180
Roast chicken	2	180	180		50-60

* First brown the meat all-round in the casserole on the cooker.

** Brown the meat at a high heat level, switch back to a lower temperature after 15-20 minutes.

Note: The values given above should be looked upon as recommended values. We advise you to always preheat the oven.
The recommended mode is printed in bold.

Grilling Table

Dish	Level from below	No pre-heat	Temp. °C	Grill Minutes		Grill and hot air Minutes		Cooking Time Minutes
				1.side	2.side	1.side	2.side	
Sliced pork belly	3		180-200	6	4	5	5	10
Kebab	3		190			8	8	16
Fried sausage	3		200	5	4			9
Merguez (grilled sausage)	3		200			6	6	12
Roast chicken	2	X	180			30	30	60
Leg of chicken	3		180	20	20	15	15	30-40
Spare Ribs	3		180-200	15	15	12	12	24-30
Leg of pork*	2		150/200					50-60
Trout	3		180-200	8	8			16
Vegetable kebabs	3		200	7	7			14
Shrimp kebabs	3		175	7	7			14
Preparing au gratin								
Toasted sandwich	3		190					5-7
Crème caramel**	4	X	250					
Crème brûlée**	4	X	250					
Cake with meringue**	3		200					

Important: Only grill with the oven door closed.

For grilling use the wire rack that fits the grilling tray (accessory or special accessory, depending on the version) to collect dripping fat.

* Do not turn the leg of pork. Set the temperature high for the last 15-20 minutes.

** You should bake this dish au gratin until it has reached the level of browning you require.

Note: The values given above should be looked upon as recommended values.
The recommended mode is printed in bold.

Tips and Tricks

Baking

What to do if...	The solution
... a cake baked in a tray is too light at the bottom?	Insert the tray on a lower level and remove all other trays from the oven.
... a cake baked in a form is too light at the bottom?	Do not insert the baking form in the oven on the tray, but on the wire rack.
... a cake/small cakes and pastries are too dark at the bottom?	Insert the cake/pastries at a higher level.
... a cake is too dry?	Set the oven temperature to a slightly higher value. Preheat the oven.
... a cake is too moist on the inside or if meat is not cooked on the inside?	Set the baking or roasting temperature to a slightly lower value. Important: baking or roasting times cannot be shortened by selecting higher temperatures. It is better to choose a slightly longer baking or roasting time and to allow the dough to bake longer.
... a cake baked with hot air in a form or a rectangular form is too dark at the back?	Do not place the baking form directly in front of the rear wall of the oven, but in the middle.
... a cake sinks?	Use less fluid the next time or set the oven temperature to a value that is lower by 10 degrees. Pay attention to the stirring times specified in the recipe. Do not open the oven door too soon.
... a cake has risen in the middle and is lower at the edges?	Do not grease the edge of the spring form. After baking, carefully loosen the cake with a knife.
... a cake is too dark at the top?	Insert it on a lower level, select a lower temperature and bake the cake for a slightly longer time.
... a cake is too dark at the bottom?	Insert it at a higher level and choose a lower temperature the next time.
... a fruit cake is too light at the bottom and the fruit juices spill over?	Use the deeper grilling tray for baking.
... a cake is too dry at the bottom?	Use a toothpick to make small holes in the finished cake. Then sprinkle fruit juice or an alcoholic beverage over it. The next time, choose a temperature that is higher by 10 degrees and shorten the baking time.
... bread or a cake looks good from the outside, but is too moist on the inside?	The next time, use slightly less fluid and bake slightly longer at a lower temperature. In the case of cakes with a moist covering, first bake the base, sprinkle almonds or breadcrumbs over it and then add the covering. Pay attention to recipes and baking times.
... you have baked on several levels and your cake on the top tray is darker than on the bottom one?	If you select a slightly lower temperature, your cakes and pastries will be browned more evenly. Trays inserted at the same time need not be ready at the same time. Allow the bottom trays to bake for 5-10 minutes longer and insert them at an appropriately earlier time.
... biscuits stick to the tray?	Briefly reinsert the tray in the oven and remove the biscuits immediately.
... a cake does not come out of the tin easily?	Carefully loosen the edge with a knife. Turn out the cake again and cover the form several times with a cold wet cloth. The next time, grease the form well and additionally sprinkle breadcrumbs into it.

Further Tips for Baking

You are advised to use dark metal baking forms. You may also use light baking forms in the hot air mode. In this case, the baking time is longer.

The values in the cooking tables apply to the preheated oven. The temperature and duration depend on the quantity and consistency of the dough. This is why the tables list temperature ranges. You are advised to begin with the lowest temperature the first time. If required, set it higher the next time. A lower temperature ensures more even browning.

To find out if your cake has baked properly, insert a wooden stick at the highest point of the cake after expiry of the baking time specified in the recipe. The cake is ready if dough no longer sticks to the wood.

Tips for Roasting and Grilling

You can use any heat-resistant dishes. Place dishes in the middle of the wire rack. You can also use the grilling tray for large roasts.

The side racks can be removed when preparing large, bulky roasts. Place the wire rack directly onto the bottom of the oven and place the dish or the roaster onto the wire rack. Do not place the dish or roaster directly onto the enamelled bottom of the oven.

After removing glass dishes, place them on a dry kitchen cloth or cooling grill. Do not place them on a cold or wet support surface. The glass could crack.

Before serving, allow the roast to rest for 10 minutes with the oven switched off and closed. This keeps the roast juicy.

Always grill in the closed oven. If possible, grilled pieces should be equally thick, at least 2 to 3 cm. When this is the case, they will brown evenly and will stay nice and juicy. Never grill steaks salted! Place pieces for grilling directly on the wire rack.

Poultry becomes particularly crispy brown if you coat it with butter, salt water, dripped-off fat or orange juice.

For roasting use the wire rack that fits the grilling tray (accessory or special accessory, depending on the version). Put a small amount of water into the grilling tray. This ensures that the juices of the meat are collected and the oven stays clean.

In the case of duck or goose, pierce the skin under the wings to allow the fat to drain off.

What to do, if...

... a roast has become dark and parts of the crust are burnt?

Check the insertion height and the temperature.

... a roast looks good, but the sauce is burnt?

The next time, choose a smaller roasting dish and add more fluid.

... a roast looks good, but the sauce is too light and has become watery?

The next time, choose a larger roasting dish and use less fluid.

... the table does not list a weight for the roast?

Choose the next lowest weight in the list and prolong the roasting time.

Timer

Using the timer menu you can set the following:


- ⌚ timer
- ⌚ stopwatch
- ⌚ cooking time duration (not during stand-by)
- ⌚ cooking time end (not during stand-by)

Calling up the Timer Menu

Touch the key beside the symbol ⌚ to call up the timer menu.

If the appliance is on standby, touch any key. Now the display is activated. The info **i** and timer ⌚ symbols are shown.

Touch the key next to the timer symbol ⌚. The timer menu appears.

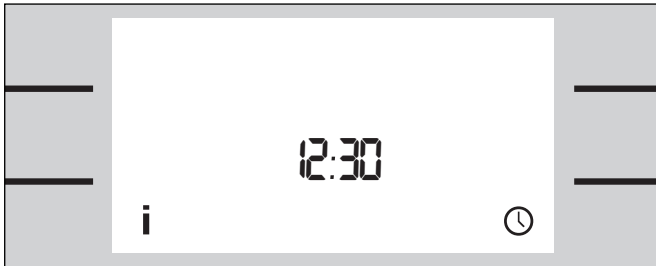

Timer

The timer counts down independently of all other settings of the appliance. You can enter a maximum value of 90 minutes.

Setting the Timer

- 1 Call up the timer menu. The timer function ⌚ is shown on the display.
- 2 Using **+** or **-** set the desired duration.
- 3 Start using the ⏪ key.



The timer menu is closed.

Note: the timer starts automatically after a few seconds without touching the ⏪ key.

A signal sounds when the time has elapsed. Touch the ⌚ key to switch off the signal.

Note

To cancel an active timer:
Call up the timer menu, select the timer function ⌚ and touch the **C** key.

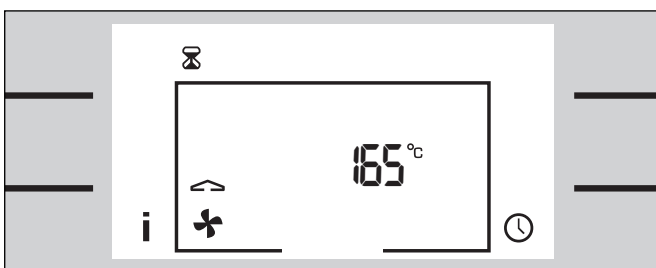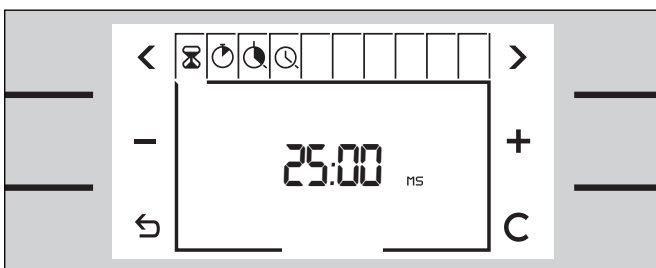

Stopwatch

The stopwatch will count the elapsed time up to 90 minutes.

The pause function pauses the stopwatch.




The stopwatch runs independently of all other settings of the appliance.

Starting the Stopwatch

- 1 Call up the timer menu.
- 2 Using < or > select the stopwatch function ⌚.
- 3 Start using the ▶ key.

The timer menu is closed.

The timer menu is closed immediately when you touch the ↶ key.

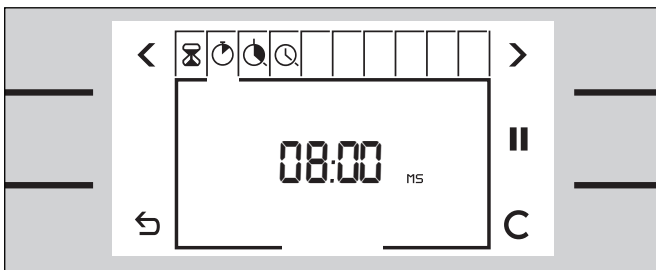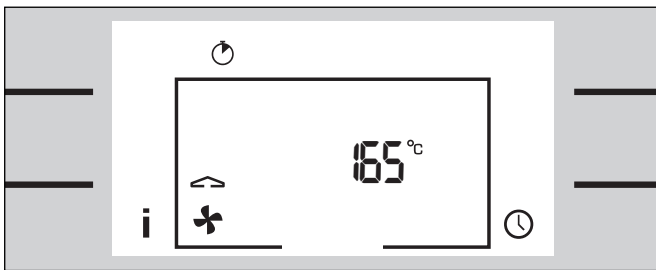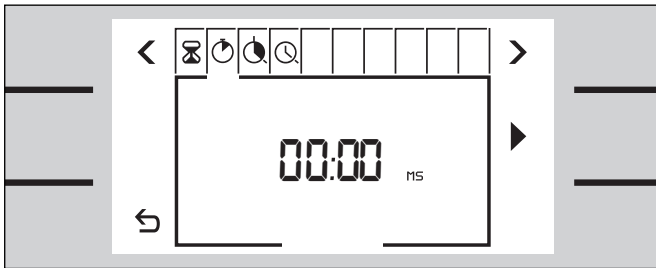

Pausing the Stopwatch

- 1 Call up the timer menu.
- 2 Using < or > select the stopwatch function ⌚.
- 3 Touch the || key. The counter stops. The key reverts to start ▶.
- 4 Start again using the ▶ key. The counter continues.

After 90 minutes the time reverts to 00:00 minutes. The symbol ⌚ in the status bar disappears. The stopwatch is switched off.

Note

To cancel the stopwatch:
Call up the timer menu, select the stopwatch function ⌚ and touch the C key.

Cooking Time Duration



If you set a cooking time duration for your meal, the appliance switches off automatically after the selected time.

This enables you to leave the kitchen while the meal is being prepared.


You can select a cooking time between 1 minute and 23 hours 59 minutes.


Select the temperature and heating mode and place your meal in the oven.

Switching off Automatically

- 1 Call up the timer menu.
- 2 Using **<** or **>** select the cooking time duration function .
- 3 Using **+** or **-** set the required cooking time.
- 4 Start the program using the  key.


The timer menu is closed. Temperature and heating mode are shown on the display.

After the time has elapsed the appliance switches off. A signal sounds. Touch the  key or open the appliance door to switch off the signal.

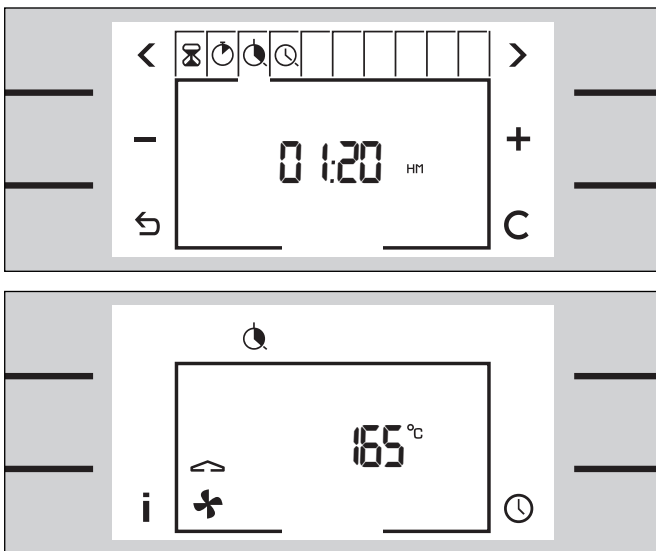


Note

 To cancel the cooking time:

Call up the timer menu. Touch the **C** key, then touch  to confirm.

To change the cooking time:

Call up the timer menu. Change the time with **+** or **-**, then touch  to confirm.

To stop the program:

Switch the temperature knob off.

Cooking Time End

You can program a cooking time end. Example: it is 13:30. The meal will take 40 minutes to cook and must be ready at 15:30.

Set the cooking time duration and set the cooking time end to 15:30. The electronics will calculate the start time. The appliance will start automatically at 14:50 and switch off at 15:30.

Please note that food which can easily go off should not stay in the oven too long.

Note:


Always set the desired temperature, heating mode and cooking time duration first. Only by setting these values can the cooking time end be programmed.

Switching on and off Automatically

- 1 Set the required cooking time.
- 2 Using **>** select cooking time end **🕒**. The switch off time appears on the display.
- 3 Using **+** set a later switch-off time.
- 4 Start using the **↵** key. The timer menu is closed.

Temperature and operating mode appear on the display. The appliance is on standby and will start automatically. After the cooking time duration it will switch off.

After the time has elapsed the appliance switches off. A signal sounds. Touch the **🕒** key, open the appliance door or switch off the temperature selector to switch off the signal.

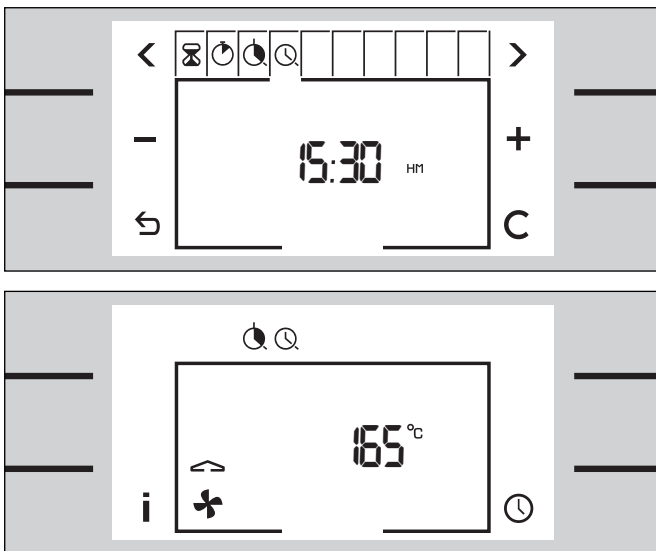

Note

To cancel the cooking time:

Call up the timer menu. Touch the **C** key, then touch **↵** to confirm. Cooking time duration and end are cancelled.

To stop the program:

Switch the temperature knob off.

If the **🕒** symbol flashes:

You have not set the cooking time duration. Always set the cooking time duration first.

Child Lock

The oven has a child lock. It prevents the oven being turned on unintentionally.

 

Supposition:

You have to make the child lock available in the basic settings. See chapter basic settings.


Activating the Child Lock




Supposition:

The temperature knob is in the OFF position.


 
- 1 Touch any key. The symbol  appears beside the centre left key.
- 2 Touch the key  for at least 6 seconds.

The child lock is active, the controls are locked.

The standby screen and the symbol  appear.

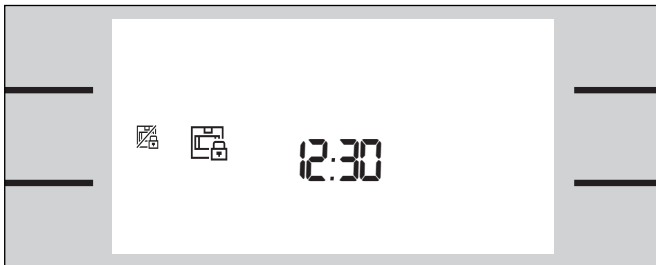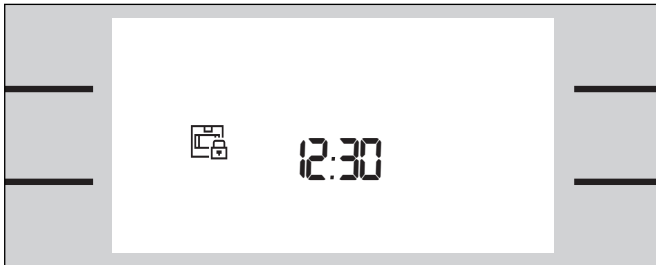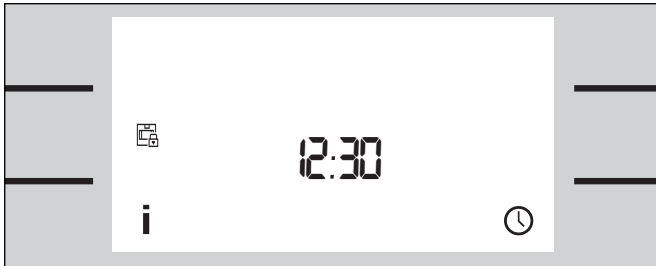




Deactivating the Child Lock

- 1 Touch any key. The symbol  appears beside the centre left key.
- 2 Touch the key  for at least 6 seconds.

The child lock is deactivated. You can operate the appliance as usual.

Note

If you cannot find the  key beside the centre key: Call up the basic settings menu. Select the child lock function. Select "child lock available" .

If the child lock key is no longer required: Call up the basic settings menu. Select the child lock function. Select "child lock not available" .

Safety Deactivation



For your protection the appliance has a safety deactivation. The safety deactivation switches off the heat if the oven is left on for more than 12 hours without the controls being touched.





Three dashes appear on the display. Switch the temperature knob off. Then you can operate the appliance as usual.

Changing the Basic Settings

Your appliance has several basic settings.

You can customize these settings:


Turn the temperature knob one position to the right to the light position.

- Call up the basic settings menu with the  key.
- Use the top  or  keys to move between the settings.
- Use the centre keys to change the selected setting. You can change several settings individually without leaving the menu.
- Touch the  key to exit the menu. All settings are saved.

Note


If no key has been touched for 60 seconds the menu disappears. The standby screen appears. All settings are saved.

The Following Settings Can Be Changed

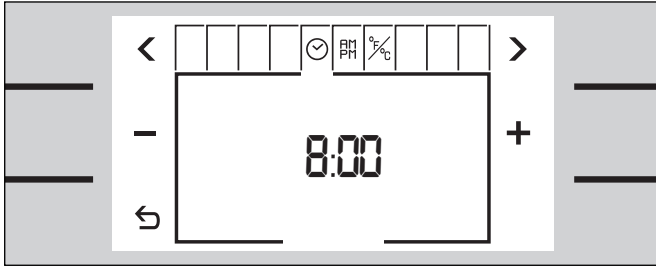


Clock

- Hours / minutes

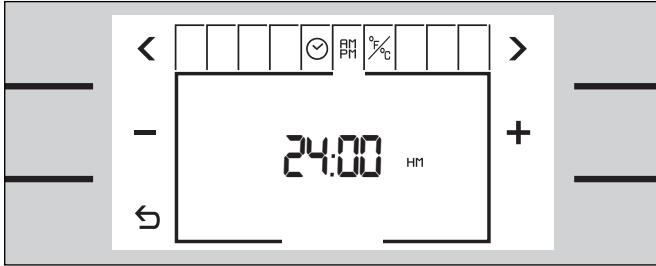


Time format

- 12 hour format (AM/PM) or 24 hour format

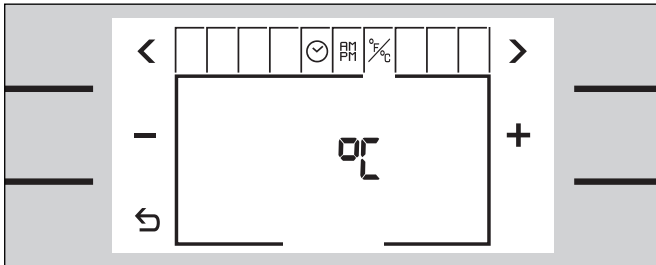


Temperature unit

- °F or °C

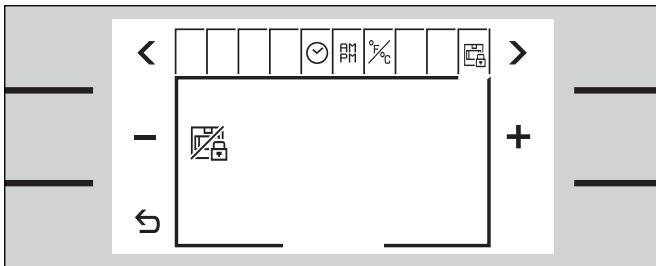

Child lock

- Child lock key not available / available

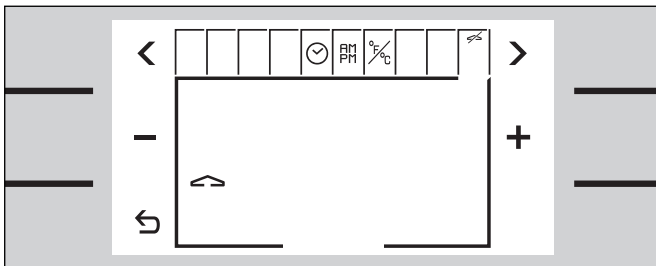

Exhibition mode

The setting ⇄ “exhibition mode not active” must be selected and must not be changed. The appliance does not heat up during exhibition mode ~~↗~~.

You can only change this setting 3 minutes after the appliance has been connected to the electricity.

Care and Manual Cleaning

Safety Notes

⚠ **Warning!** Do not clean the hob using high pressure cleaners or steam jets.

⚠ **Warning, risk of burns!** Before cleaning, wait until the appliance has cooled down.

Cleaning the Oven Interior

Clean the oven with a cloth/sponge and a small amount of hot soapy water. Avoid residues burning in. After cleaning, leave the door open until the oven has dried.

Do not scrape off baked-in remainders of food. Instead, moisten them with a wet cloth and detergent.

Fruit juices from moist cakes dripping onto the oven interior can damage the enamel. Remove such soiling as soon as the oven has cooled down sufficiently.

Do not use non-suitable cleaning agents:

- scouring cleaning agents
- nitro polishing agents
- cleaners containing chloride
- abrasive sponges or objects

Note: Only use oven cleaner on the enamel in the oven interior. Do not let the oven cleaner come into contact with the door seal. Do not spray oven cleaner onto the door frame.

Cleaning the Glass Front

Clean the glass front with a soft cloth and glass cleaner. Do not wipe the glass front with a soaking wet cloth as water might enter behind the glass.

Do not use aggressive, scouring cleaning agents or glass scrapers. They can scratch the surface and destroy the glass.

Only clean the display with a soft cloth. Do not wipe the display with a soaking wet cloth as water might enter behind the screen.

Cleaning the Door Seal

Always keep the door seal clean and free of food remains.

Do not use aggressive cleaning agents (e.g. oven cleaner) on the door seal. They can destroy the door seal.

Do not remove the door seal.

Cleaning the Accessories

Clean accessories (baking tray, wire grill and grill pan) with hot soapy liquid.

Soak baked-in remainders and clean with a brush.

Cleaning the Baking Stone

(special accessory)

Remove coarse soiling from the baking stone. Turn the baking stone round before using it again. This will burn off most residues from the bottom side.

Note: Do not clean the baking stone with water and detergents! Moisture inside the baking stone can cause cracking.

Catalytic Cleaning

You can order as a spare part the rear and top interior panels for the oven which are coated with catalytic special enamel. The high temperatures during catalytic cleaning remove soiling.

The bottom and side interior parts, the inside of the door and the glass panel are not cleaned during catalytic cleaning.


The duration of the catalytic cleaning is 3 hours.

Before Starting Catalytic Cleaning

- Remove coarse soiling and food remains from the oven.
- Manually clean the bottom and side interior parts, the door seal, the inside of the door and the glass panel. The catalysis does not clean these parts.
- Remove all loose interior parts (for example wire rack) from the oven. No objects should be left in the oven!
- Close the oven door.

Setting the Program


- 1 Turn the temperature knob and the function knob one position to the left.
- 2 The catalysis menu appears. The switch-off time of the catalytic cleaning appears on the display
- 3 If you want the catalytic cleaning to run at a later time (for example during the night), you can change the switch-off time using the **+** key.
- 4 Press **↶** to start.

The catalysis menu disappears. The  symbol and the catalysis temperature appear on the display.

A signal is sounded at the switch-off time.

Exception: There is no signal between 22.00 and 8.00.

The catalytic cleaning has ended. Switch off the temperature knob. Allow the oven to cool down fully.

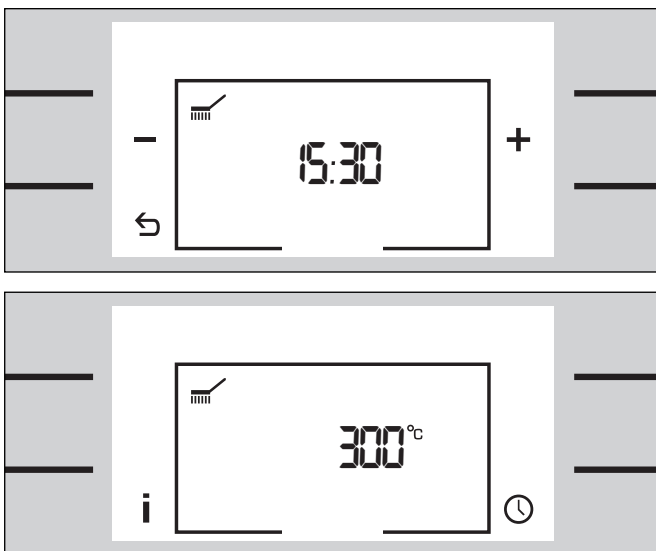

Note

The duration of the catalysis cannot be changed. You can view the remaining duration of the catalysis and the switch-off time by calling up the timer menu.

If you want to stop the catalytic cleaning:
Switch off the temperature knob.

If you have delayed the switch-off time, three dashes instead of the temperature are shown on the display. After the start of the catalysis the temperature appears on the display.

Removing the Rails

The rails can be removed for cleaning.

To Unhook the Rails


- 1 Lift the rail at the front in an upwards direction.
- 2 Unhook the rail at the front.
- 3 Then pull the whole rail forward and take it out.

Clean the rails using either washing-up liquid and a sponge or a brush.

To Hook Rails Back into Position

- 1 First insert the rail in the rear socket.
- 2 Push the rail back slightly and then hook it into the front socket.

The rails fit both the left and right sides. Recess (a) must always be at the bottom.

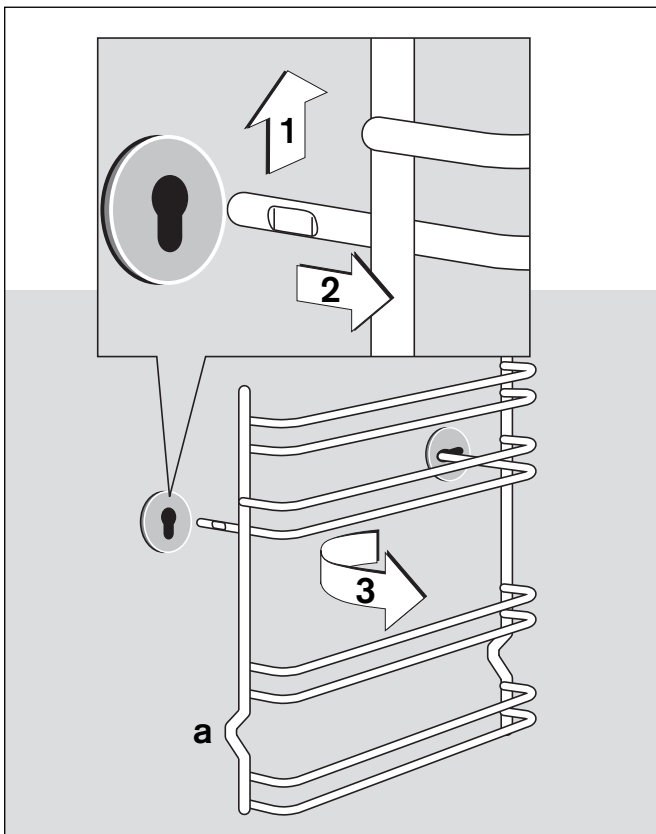

Trouble Shooting

In case of a malfunction first check the household fuses. If the power supply is functioning correctly contact your dealer or Gaggenau after-sales service.

Please specify the E number and FD number of the appliance when calling our after-sales service. You find these numbers on the rating plate of the appliance.

Repairs may only be carried out by authorised technicians, in order to guarantee the electrical safety of the appliance.

⚠ Warning! Incorrect repairs may result in serious injury to the user.

All poles of the appliance must be disconnected from the electricity when being repaired (switch off the household fuse or the circuit breaker in the fuse box).

Non compliance with these recommendations results in the warranty coverage becoming invalid.

Error Messages

If a malfunction occurs and the appliance does not heat up, an error code will be shown on the display.

If *E003*, *E303*, *E115* or *E215* is shown on the display the appliance is too hot. Switch off the appliance and let it cool down.


If a different error code is shown on the display call the after-sales service. Please specify the error code and the appliance type. You find the appliance type on the rating plate.

Switch off the temperature knob.



Note:


The short timer and stop clock can still be used.

Exhibition Mode

If the  symbol appears on the standby screen, exhibition mode is activated. The appliance does not heat up.

Disconnect the appliance from the electricity for a few seconds (switch off the household fuse or the circuit breaker in the fuse box). Within 3 minutes after reconnecting the appliance go to the basic settings menu and deactivate exhibition mode.

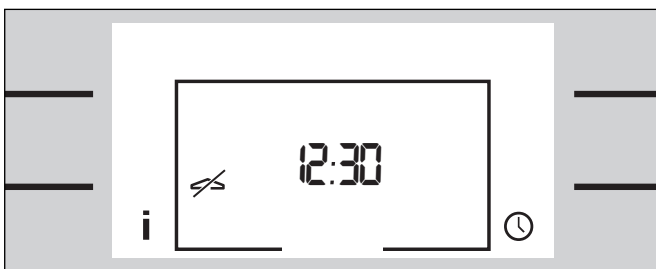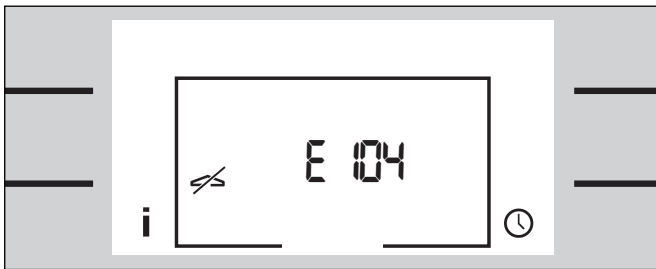

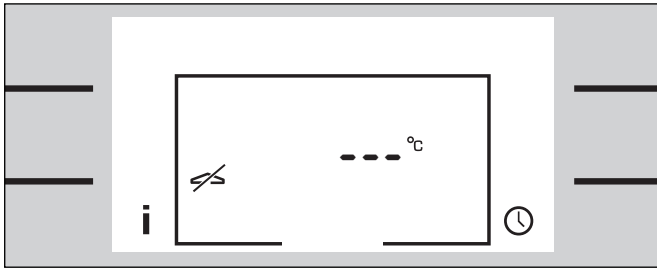

Power Cut

The appliance bridges a power cut of up to 5 minutes. The operation continues.

After a longer power cut the appliance will switch off the operation. The ⚡ symbol appears on the display and three dashes instead of the temperature.

Switch off the temperature knob and switch the appliance back on.

The “first settings” menu reappears if the appliance is without electricity for several days. You have to set the clock.


Note: The basic settings remain stored even if the appliance is without electricity for several days.

Replacing the Oven Light

If an oven light fails, it must be replaced. Heat-resistant replacement bulbs can be obtained from the after-sales service or specialist shops. Only use these bulbs.

⚠ Warning, risk of burns! Oven lights get very hot during use. Only replace the oven light when it is cold.

Disconnect the appliance from the electricity before replacing the light (switch off the household fuse or the circuit breaker in the fuse box).

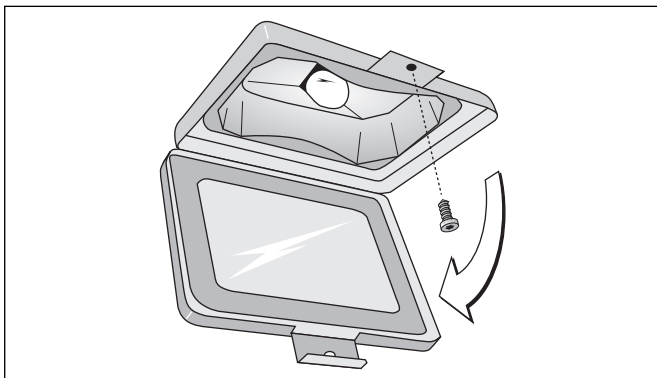

- 1 Loosen the screw on the lamp cover. Tilt down the lamp cover.
- 2 Pull out the bulb. Push the new bulb in firmly. Make sure that the pins are in the correct position.
Note: Only use a heat-resistant halogen bulb of the same type (60 W / 230 V / G9). Do not touch the halogen lamp with your hands. Use a dry cloth.
- 3 Tilt the lamp cover up and screw it back on.
- 4 Switch the circuit breaker back on.

Gaggenau Hausgeräte GmbH
Carl-Wery-Straße 34
D-81739 München
www.gaggenau.com

9000434616 EB 8912 en

GAGGENAU